

Definitions

Working Load Limit (WLL)

The maximum load, which a lifting point is designed to support.



NOTICE

Read ASME B30.9 for sling inspection criteria.

Read ASME B30.26 "Rigging Hardware",

Chapters 26-0, 26-1, 26-4.

2. BASIC SAFETY REQUIREMENTS



WARNING

To prevent the risk of injury never walk or stay under lifted loads!

The Working Load Limit must not be exceeded!

Lifting points screw type as well as lifting and attachment means to be used must be free from defects!

Working under the influence of drugs, medications impairing the sense and/or alcohol is strictly forbidden!

SAFETY INSTRUCTIONS

- Operators, fitters and maintenance personnel must in particular observe the Operating Instructions of the used sling assembly. The Operating Instructions for the load, if it contains instructions for lifting, must also be observed.
- The specific safety and operating regulations and standards issued locally in the country where the items are used must be observed.
- The directions given in these Operating Instructions and specified documentations relating to safety, assembly, operation, inspection, and maintenance must be made available to persons operating and using the lifting points.
- These Operating Instructions must be available in a place near the product during the time the equipment is used. Please contact the manufacturer if replacements are needed.
- During operation work, wear your personal protective equipment!
- Improper assembly and use may cause personal injury and/or damage to property.



WARNING

The following Operating Instructions must always be followed to avoid the risk of personal injury or property damage.

Do not use a lifting point screw type before reading these Operating Instructions.

1. ABOUT THIS INSTRUCTION

This Operating Instruction describes in particular how lifting points, screw type according to TWN 0121/1, TWN 0122, TWN 0123, TWN 0127, TWN 1120, TWN 1830, TWN 1884 and TWN 1890 (TWN = THIELE Shop Standard) are to be safely used for lifting purposes.

The instructions apply analogously to components of identical design.

To comply with these instructions is essential to help avoid hazards and increases the reliability and service life of the lifting points.

DANGER

DANGER! Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.

WARNING

WARNING! Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION! Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

SAFETY INSTRUCTIONS

NOTICE! Is used to address practices not related to physical injury.

Safety Instructions signs indicate specific safety-related instructions or procedures.

**SAFETY
INSTRUCTIONS**

- Assembly and removal as well as inspections and maintenance must exclusively be carried out by skilled, qualified, trained and authorized persons only.
- Structural changes are impermissible (e.g. welding, bending).
- **Operators must carry out a visual inspection and, if necessary, a functional test of the safety equipment before each use.**
- Never use worn-out, bent or damaged lifting points.
- Only lift loads that do not exceed the Working Load Limit of the lifting points screw type.
- In case of using a 3- or 4-leg chain sling assembly never allow for inclination angles of less than 30° and in excess of 75°.
- Do not use force when mounting/positioning the attachment components.
- The load must resist and tolerate the forces to be applied without suffering deformation.
- Only lift loads that are freely movable and not attached or fastened.
- Do not bend the ring.
- Never install more than one connecting component to a ring.
- Do not start lifting before you have made sure the load has been correctly attached and balanced.
- **No one including you (operator) must be in the way of the moving load (hazard area).**
- During lifting your hands or other body parts must not come into contact with lifting means. Only remove lifting means manually (use your hands).
- Avoid impacts, e.g. due to abruptly lifting loads with chain in slack condition.
- Never move a suspended load over persons.
- Never cause suspended loads to swing.
- Always monitor a suspended load.
- Put the load only down in flat places/sites where it can be safely deposited.
- Assume for sufficient place for the personnel to move when choosing the route of transportation and storage location. Danger to life and risk of injury by crushing hazards!
- In the event of doubts or concerns about the proper and safe use, inspection, maintenance or similar things contact your safety officer or the manufacturer.

THIELE is not responsible for damage caused by non-observance of the instructions, rules, standards and notes indicated!

As a rule, lifting points are not permitted for the transportation of persons.

3. DESCRIPTION AND INTENDED USE

THIELE lifting points screw-type are exclusively intended for attachment to steel, aluminum or non-ferrous metal structures and components.

Sling chains according to ASTM A 906/A 906 M may be used.

These Operating Instructions show the safety use of THIELE lifting points of the following executions:

- TWN 0121/1 Lifting points, rotatable, with slide bearing
- TWN 0122 Lifting points
- TWN 0123 Lifting points
- TWN 0127 Lifting points MDB
- TWN 1120 TITAN Lifting points, rotatable, with slide bearing
- TWN 1830 X-TREME Lifting points, rotatable, with ball bearing
- TWN 1884 KE-Eyebolt, with ball bearing
- TWN 1890 Lifting points XS-Point, rotatable

THIELE lifting points meet EG Machinery Directive 2006/42/EG requirements and feature a safety factor of at least 4 based on Working Load Limit.

They are signed with the Working Load Limit in tons or the nominal chain size, manufacturer's mark and traceability code.

TWN 1830 are additionally marked on the bottom part with the date of manufacture in the form "mm.yy" (mm = month, yy = year). Example: "1220" = production in December 2020 #

THIELE lifting points are designed to withstand 20,000 dynamic load changes under maximum load conditions. In the event of higher loads (e.g. multi-shift/automatic operation) the Working Load Limit must be reduced.

Lifting points must exclusively be used

- within the limits of their permissible Working Load Limit,
- within the temperature limits prescribed,
- with suitable screws and fitted directly to the component,
- by trained and authorized persons.

Using the lifting points exclusively for lashing the lashing capacity is calculated by doubling the Working Load Limit.



An alternating use for lifting and lashing is not allowed.

4. COMMISSIONING

Prior to using the components for the first time assure that

- the components comply with the order and have not been damaged,
- test certificates and Operating Instructions are at hand,
- markings correspond with what is specified in the documentation,


- inspection deadlines and the qualified persons for examinations are determined,
- visibility and functional testings are carried out and documented,
- documentation is safely kept in an orderly manner.

Dispose of the packing in an environmentally compatible way according to local rule.

5. TECHNICAL DATA

Tables include only article numbers of standard and not customized parts.

Table 1

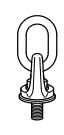Type	Article No.	WLL [lbs]	[t]	Usable thread length [mm]	Screw data / Suspension link [mm]	Tightening Torque [Nm]
TWN 0121/1 	F35000	2 500	1.12	M16 x 25	M16 x 40 DIN 7984 8.8 ²⁾	170 ¹⁾
	F35010	4 500	2.0	M20 x 30	M20 x 50 DIN 7984 8.8 ²⁾	350 ¹⁾
	F35020	7 100	3.15	M24 x 36	M24 x 60 DIN 7984 8.8 ²⁾	600 ¹⁾
	F35030	12 000	5.3	M30 x 50	M30 x 80 DIN 6912 10.9 ²⁾	1 200 ¹⁾
TWN 0122 	F35070	7 100	3.15	M16 x 25	M16 x 45 DIN 7984 10.9 ²⁾	170 ¹⁾
	F35075	12 000	5.3	M20 x 36	M20 x 60 DIN 7984 10.9 ²⁾	350 ¹⁾
	F35080	18 100	8.0	M30 x 50	M30 x 80 DIN 6912 10.9 ²⁾	950 ¹⁾
	F35095	34 200	15	M36 x 53	M36 x 90 DIN 6912 10.9 ²⁾	1 900 ¹⁾
	F35098	47 700	21.2	M42 x 67	M42 x 100 sim. DIN7984 10.9 Spec. ²⁾	2 100 ¹⁾
	F35101	55 100	25	M45 x 67	M45 x 110 sim. DIN7984 10.9 Spec. ²⁾	2 400 ¹⁾
	F35102	72 300	31.5	M56 x 88	M56 x 135 sim. DIN7984 10.9 Spec. ²⁾	3 200 ¹⁾
	F35285	79 400	36	M56 x 88	M56 x 135 sim. DIN7984 10.9 Spec. ²⁾	3 200 ¹⁾
TWN 0123 	F34110	2 500	1.12	M16 x 30	B16 x 70 x 35	
	F34115	2 500	1.12	M16 x 30	A16 x 110 x 60	
	F34120	4 500	2.0	M20 x 38	B16 x 70 x 35	
	F34121	4 500	2.0	M20 x 38	A16 x 110 x 60	hand-screwed
	F34130	7 100	3.15	M24 x 35	B18 x 85 x 40	
	F34131	7 100	3.15	M24 x 45	A18 x 110 x 60	
TWN 0127 	F35157	7 100	3.15	M20 x 38	M20 x 50 ISO 4017 10.9 ²⁾	350
	F35158	12 000	5.3	M24 x 35	M24 x 50 ISO 4017 10.9 ²⁾	600
TWN 1120 	F34405	700	0.3	M8 x 18	M8 x 35 12.9	
	F34390	1 000	0.45	M10 x 18	M10 x 35 12.9	
	F34395	1 300	0.6	M12 x 23	M12 x 40 12.9	
	F34400	3 100	1.4	M16 x 28	M16 x 45 10.9	
	F34410	5 500	2.5	M20 x 32	M20 x 50 10.9	
	F34420	7 700	3.5	M24 x 40	M24 x 60 10.9	
	F34430	15 000	6.7	M30 x 52	M30 x 80 12.9	
	F34440	18 100	8.0	M36 x 66	M36 x 100 12.9	

1) for tapped holes in steel

2) additional technical THIELE-specification must be observed

OPERATING INSTRUCTIONS
LIFTING POINTS
SCREW TYPE



Table 2

Type	Article No.	WLL [lbs]	[t]	Usable thread length [mm]	Screw data / Suspension link [mm]	Tightening Torque [Nm]
TWN 1830	F34306	1 000	0.45	M10 x 15	B13 x 55 x 33	hand-screwed by open-ended spanner
	F34307	1 300	0.6	M12 x 18	B13 x 55 x 33	
	F34300	3 100	1.4	M16 x 20	B13 x 55 x 33	
	F34310	5 500	2.5	M20 x 25	B16 x 70 x 35	
	F34320	7 700	3.5	M24 x 30	B18 x 85 x 40	
	F34330	12 000	5.3	M30 x 40	B22 x 100 x 50	
	F34340	18 100	8.0	M36 x 50	B22 x 100 x 50	
	F34350	22 600	10	M42 x 60	B32 x 140 x 70	
	F34353	28 300	12.5	M45 x 65	B32 x 140 x 70	
	F34355	28 300	12.5	M48 x 68	B32 x 140 x 70	
	F34360	37 500	17	M56 x 78	B32 x 140 x 70	
	F34363	37 500	17	M64 x 96	B32 x 140 x 70	
	F34380	69 400	31.5	M72 x 108	B45 x 220 x 110	
	F34383	77 100	35	M80 x 120	B45 x 220 x 110	
TWN 1884	F38005 *	1 100	0.5	M8 x 16	DIN 7991 M8 x 30 10.9 ²⁾	hand-screwed by allen key
	F38006 *	1 600	0.75	M10 x 16	DIN 7991 M10 x 30 10.9 ²⁾	
	F38007	2 100	1.0	M12 x 18	DIN 7991 M12 x 35 12.9 ²⁾ *	
	F38010	3 800	1.7	M16 x 27	DIN 7991 M16 x 50 10.9 ²⁾	
	F38020	5 700	2.6	M20 x 33	DIN 7991 M20 x 60 10.9 ²⁾	
	F38030	7 100	3.2	M24 x 39	DIN 7991 M24 x 70 10.9 ²⁾	
WN 1890	F35243	1 400	0.63	M10 x 17	M10 x 45 ISO 4017 12.9 ²⁾	80
	F35244	2 100	1.0	M12 x 22	M12 x 50 ISO 4017 12.9 ²⁾	130
	F35245	3 800	1.7	M16 x 30	M16 x 70 ISO 4017 10.9 ²⁾	180
	F35246	5 500	2.5	M20 x 38	M20 x 80 ISO 4017 10.9 ²⁾	350
	F35247	8 800	4.0	M24 x 40	M24 x 90 ISO 4017 12.9 ²⁾	500
	F35249	13 200	6.0	M30 x 44	M30 x 100 ISO 4017 10.9 ²⁾	500
	F35250	18 100	8.0	M36 x 64	M36 x 120 ISO 4017 12.9 ²⁾	750
	F35251	22 600	10	M42 x 74	M42 x 140 ISO 4017 10.9 ²⁾	950

1) for tapped holes in steel

2) additional technical THIELE-specification must be observed

Table 3

Type	Article No.	WLL [lbs]	LOAD TABLE for different applications of assembly [lbs]											
			1-leg 	2-leg 	1-leg 	2-leg 	30°≤α<45° 	45°≤α<60° 	60°≤α<90° 	dissym. 3) 	30°≤α<45° 	45°≤α<60° 	60°≤α<75° 	dissym. 3)
TWN 0121/1	F35000	2 500	2 500	5 000	2 500	5 000	2 500	3 500	4 300	2 500	3 700	5 300	6 500	2 500
	F35010	4 400	4 400	8 800	4 400	8 800	4 400	6 200	7 600	4 400	6 600	9 300	11 400	4 400
	F35020	6 900	6 900	13 800	6 900	13 800	6 900	9 800	12 000	6 900	10 300	14 600	17 900	6 900
	F35030	11 700	11 700	23 400	11 700	23 400	11 700	16 500	20 300	11 700	17 500	24 800	30 400	11 700
TWN 0122	F35070	6 900	6 900	13 800	6 900	13 800	6 900	9 800	12 000	6 900	10 300	14 600	17 900	6 900
	F35075	11 700	11 700	23 400	11 700	23 400	11 700	16 500	20 300	11 700	17 500	24 800	30 400	11 700
	F35080	17 600	17 600	35 200	17 600	35 200	17 600	24 900	30 500	17 600	26 400	37 300	45 700	17 600
	F35095	33 100	33 100	66 200	33 100	66 200	33 100	46 800	57 300	33 100	49 600	70 200	86 000	33 100
	F35098	46 700	46 700	99 400	46 700	99 400	46 700	66 000	80 900	46 700	70 000	99 100	121 300	46 700
	F35101	55 100	55 100	110 200	55 100	110 200	55 100	77 900	95 400	55 100	82 600	116 900	143 200	55 100
	F35102	69 500	69 500	139 000	69 500	139 000	69 500	98 300	120 400	69 500	104 200	147 400	180 600	69 500
	F35285	79 400	79 400	158 800	79 400	158 800	79 400	112 300	137 500	79 400	119 100	168 400	206 300	79 400

3) reduced WLL according to DIN 685-5 (DIN = German institute for standardization)

OPERATING INSTRUCTIONS
LIFTING POINTS
SCREW TYPE



Table 4

LOAD TABLE for different applications of assembly [lbs]

Type	Article No.	Nominal WLL [lbs]	LOAD TABLE for different applications of assembly [lbs]													
			1-leg 	2-leg 	1-leg 	2-leg 	2-leg 			2-leg 	2-leg 	dissym. ³⁾ 	30°≤α<45° 	45°≤α<60° 	60°≤α<90° 	30°≤α<45°
TWN 0123 	F34110	2 500	2 500	5 000	2 500	5 000	2 500	3 500	4 300	2 500	3 700	5 300	6 500	6 500	2 500	
	F34115	2 500	2 500	5 000	2 500	5 000	2 500	3 500	4 300	2 500	3 700	5 300	6 500	6 500	2 500	
	F34120	4 400	4 400	8 800	4 400	8 800	4 400	6 200	7 600	4 400	6 600	9 300	11 400	4 400		
	F34121	4 400	4 400	8 800	4 400	8 800	4 400	6 200	7 600	4 400	6 600	9 300	11 400	4 400		
	F34130	6 900	6 900	13 800	6 900	13 800	6 900	9 800	12 000	6 900	10 300	14 600	17 900	6 900		
	F34131	6 900	6 900	13 800	6 900	13 800	6 900	9 800	12 000	6 900	10 300	14 600	17 900	6 900		
TWN 0127 	F35157	6 900	6 900	13 800	6 900	13 800	6 900	9 800	12 000	6 900	10 300	14 600	17 900	6 900		
	F35158	11 700	11 700	23 400	11 700	23 400	11 700	16 500	20 300	11 700	17 500	24 800	30 400	11 700		
TWN 1120 	F34405	650	650	1 300	650	1 300	650	900	1 100	650	1 000	1 400	1 700	650		
	F34390	1 000	1 000	2 000	1 000	2 000	1 000	1 400	1 700	1 000	1 500	2 100	2 600	1 000		
	F34395	1 300	1 300	2 600	1 300	2 600	1 300	1 800	2 300	1 300	1 900	2 800	3 400	1 300		
	F34400	3 100	3 100	6 200	3 100	6 200	3 100	4 400	5 400	3 100	4 600	6 600	8 100	3 100		
	F34410	5 500	5 500	11 000	5 500	11 000	5 500	7 800	9 500	5 500	8 200	11 700	14 300	5 500		
	F34420	7 700	7 700	15 400	7 700	15 400	7 700	10 900	13 300	7 700	11 500	16 300	20 000	7 700		
TWN 1830 	F34430	14 800	14 800	29 600	14 800	29 600	14 800	20 900	25 600	14 800	22 200	31 400	38 400	14 800		
	F34440	17 600	17 600	35 200	17 600	35 200	17 600	24 900	30 500	17 600	26 400	37 300	45 700	17 600		
	F34306	1 000	2 000 [#]	4 000 [#]	1 300 [#]	2 600 [#]	1 300 [#]	1 900 [#]	2 300 [#]	1 300 [#]	2 000 [#]	2 800 [#]	3 400 [#]	1 300 [#]		
	F34307	1 300	2 600 [#]	5 300 [#]	1 600 [#]	3 300 [#]	1 600 [#]	2 300 [#]	2 900 [#]	1 600 [#]	2 500 [#]	3 500 [#]	4 300 [#]	1 600 [#]		
	F34300	3 100	6 200 [#]	12 300 [#]	3 700 [#]	7 500 [#]	3 700 [#]	5 300 [#]	6 500 [#]	3 700 [#]	5 600 [#]	8 000 [#]	9 700 [#]	3 700 [#]		
	F34310	5 500	11 700 [#]	23 400 [#]	6 200 [#]	12 300 [#]	6 200 [#]	8 700 [#]	10 700 [#]	6 200 [#]	9 300 [#]	13 100 [#]	16 000 [#]	6 200 [#]		
TWN 1830 	F34320	7 700	15 400 [#]	30 900 [#]	8 800 [#]	17 600 [#]	8 800 [#]	12 500 [#]	15 300 [#]	8 800 [#]	13 200 [#]	18 700 [#]	22 900 [#]	8 800 [#]		
	F34330	11 700	22 000 [#]	44 100 [#]	13 900 [#]	27 800 [#]	13 900 [#]	19 600 [#]	24 100 [#]	13 900 [#]	20 800 [#]	29 500 [#]	36 100 [#]	13 900 [#]		
	F34340 [#]	17 600	33 000 [#]	66 100 [#]	20 900 ⁴⁾	41 900 ⁴⁾	20 900 ⁴⁾	29 600 ⁴⁾	36 300 ⁴⁾	20 900 ⁴⁾	31 400 ⁴⁾	44 400 ⁴⁾	54 400 ⁴⁾	20 900 ⁴⁾		
	F34350	22 000	39 700 [#]	79 400 [#]	28 700 [#]	57 300 [#]	28 700 [#]	40 500 [#]	49 600 [#]	28 700 [#]	43 000 [#]	60 800 [#]	74 500 [#]	28 700 [#]		
	F34353	27 500	44 100 [#]	88 200 [#]	33 100 [#]	66 100 [#]	33 100 [#]	46 800 [#]	57 300 [#]	33 100 [#]	49 600 [#]	70 200 [#]	85 900 [#]	33 100 [#]		
	F34355	27 500	44 100 [#]	88 200 [#]	35 300 [#]	70 500 [#]	35 300 [#]	49 900 [#]	61 100 [#]	35 300 [#]	52 900 [#]	74 800 [#]	91 600 [#]	35 300 [#]		
TWN 1884 	F34360	37 500	61 700 [#]	123 400 [#]	48 500 [#]	97 000 [#]	48 500 [#]	68 600 [#]	84 000 [#]	48 500 [#]	72 800 [#]	102 900 [#]	126 000 [#]	48 500 [#]		
	F34363 [#]	37 500	61 700 [#]	123 400 [#]	48 500 ⁴⁾	97 000 ⁴⁾	48 500 ⁴⁾	68 600 ⁴⁾	84 000 ⁴⁾	48 500 ⁴⁾	72 800 ⁴⁾	102 900 ⁴⁾	126 000 ⁴⁾	48 500 ⁴⁾		
	F34380	69 400	110 200 [#]	220 500 [#]	88 200 [#]	176 400 [#]	88 200 [#]	124 700 [#]	152 700 [#]	88 200 [#]	132 300 [#]	187 100 [#]	229 100 [#]	88 200 [#]		
	F34383	77 200	110 200 [#]	220 500 [#]	105 800 [#]	211 600 [#]	105 800 [#]	149 700 [#]	183 300 [#]	105 800 [#]	158 700 [#]	224 500 [#]	274 900 [#]	105 800 [#]		
	F34385	88 200	110 200 [#]	220 500 [#]	110 200 [#]	220 500 [#]	110 200 [#]	155 900 [#]	190 900 [#]	110 200 [#]	165 300 [#]	233 800 [#]	286 400 [#]	110 200 [#]		
	F34388	88 200	110 200 [#]	220 500 [#]	110 200 [#]	220 500 [#]	110 200 [#]	155 900 [#]	190 900 [#]	110 200 [#]	165 300 [#]	233 800 [#]	286 400 [#]	110 200 [#]		
TWN 1890 	F38005 [#]	1 100	1 100	2 200	1 100	2 200	1 100	1 500	1 900	1 100	1 600	2 300	2 800	1 100		
	F38006 [#]	1 600	1 600	3 200	1 600	3 200	1 600	2 200	2 800	1 600	2 400	3 400	4 100	1 600		
	F38007	2 200	2 200	4 400	2 200	4 400	2 200	3 100	3 800	2 200	3 300	4 700	5 700	2 200		
	F38010	3 700	3 700	7 400	3 700	7 600	3 700	5 200	6 400	3 700	5 500	7 800	9 600	3 700		
	F38020	5 700	5 700	11 400	5 700	11 400	5 700	8 100	9 900	5 700	8 500	12 100	14 800	5 700		
	F38030	7 700	7 700	15 400	7 700	15 400	7 700	10 900	13 300	7 700	11 500	16 300	20 000	7 700		
TWN 1890 	F35243	1 400	1 400	2 800	1 400	2 800	1 400	2 000	2 400	1 400	2 100	3 000	3 600	1 400		
	F35244	2 200	2 200	4 400	2 200	4 400	2 200	3 100	3 800	2 200	3 300	4 700	5 700	2 200		
	F35245	3 700	3 700	7 400	3 700	7 400	3 700	5 200	6 400	3 700	5 500	7 800	9 600	3 700		
	F35246	5 500	5 500	11 000	5 500	11 000	5 500	7 800	9 500	5 500	8 200	11 700	14 300	5 500		
	F35247	8 800	8 800	17 600	8 800	17 600	8 800	12 400	15 200	8 800	13 200	18 700	22 900	8 800		
	F35249	13 200	13 200	26 400	13 200	26 400	13 200	18 700	22 900	13 200	19 800	28 000	34 300	13 200		
TWN 1890 	F35250	17 600	17 600	35 200	17 600	35 200	17 600	24 900	30 500	17 600	26 400	37 300	45 700	17 600		
	F35251	22 000	22 000	44 000	22 000	44 000	22 000	31 100	38 100	22 000	33 000	46 700	57 200	22 000		

3) reduced WLL according to DIN 685-5 (DIN = German institute for standardization)

4) until date of manufacture „1220“ (December 2020)[#]

5) from date of manufacture „0121“ (January 2021)[#]

6. ASSEMBLY AND REMOVAL

6.1 Preparations

All components to be installed or used must be in perfect condition and the relevant Working Load Limits of all parts must accommodate the respective load to be handled.

The mounting location for each lifting point has to ensure that

- no areas of danger are created (crushing point, shearing point),
- lifting and moving is not restrained by overhang,
- used lifting means (e.g. hooks) are freely movable and will not be bended,
- incorrect use is avoided,
- the load can take the forces including safety factors safely to be applied without suffering deformation,
- lifting points cannot be damaged,
- lifting points can be used easily.

6.2 Assembly

The useful depth of the thread must enable the lifting points to be safely screwed in. Use only the delivered screws!

Make sure the tapped hole is arranged at right angle to the attachment face on the component. The depth of the thread „L“ of the component must at least be as follows:


$L = 1.0 \times d$ for steel

$L = 1.25 \times d$ for castings

$L = 2.0 \times d$ for aluminum

$L = 2.5 \times d$ in aluminum-magnesium-alloys

(L = depth of thread; d = thread diameter)

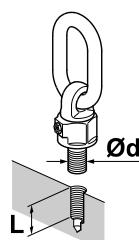

- Make sure the threads of the lifting point and in the component are clean and dry.
- For lifting points have to remain on the component a usual fluid safety agent for screws has to be used.
- In case of straight fittings, the nut has to be secured against unintentionally loosening.
- There has to be made a chamfer for each threaded hole:

Thread size [mm]	Chamfer [mm]
M8"	$1.5^{+0.5} \times 45^\circ$
M10, M12	$2.0^{+0.5} \times 45^\circ$
M16, M20	$2.5^{+0.5} \times 45^\circ$
M24, M30	$3.5^{+0.5} \times 45^\circ$
M36 – M48	$4.0^{+0.5} \times 45^\circ$
M56 – M100	$4.5^{+0.5} \times 45^\circ$

TWN 0123, TWN 1120 and TWN 1830:

Use a suitable open-ended spanner or ring spanner to fix the lifting points so as to be finger-tight.

TWN 0121/1, TWN 0122, TWN 0127, TWN 1890:

Take care to tighten the screws by the right torque shown in the tables. As long as it is ensured there is no load turning for a singular use and the lifting point cannot be loosened a hand tightening of the lifting points by a suitable open-ended spanner or ring spanner is sufficient. An additional check is necessary in case of a repeated load lowering.

TWN 1830 and TWN 1884:

Take care not to exceed the tightening torque of 40 Nm for screws M10 and M12.

6.3 Removal

Unload the lifting point and remove any lifting attachments connected to it. Turn the screw or the complete lifting point counterclockwise and remove the lifting point. Assure that no damage occurs during transport and storage.

7. CONDITIONS OF USE

7.1 Turning and rotating loads

Type	Permitted use
TWN 0121/1	Turning allowed, rotating not allowed
TWN 0122	Turning allowed, rotating not allowed
TWN 0123	No turning and/or rotating allowed
TWN 0127	Turning allowed, rotating not allowed
TWN 1120	Turning allowed, rotating not allowed
TWN 1830	Turning and rotating allowed
TWN 1884	Turning allowed, rotating not allowed
TWN 1890	Turning allowed, rotating not allowed

This classification relates to occasionally turning or rotating loads.



Continuous or long-term turning or rotating is not allowed.

7.2 Normal Use

The Working Load Limit for different applications of assembly can be seen in the load tables, Table 3 and Table 4.



The top part of the lifting point including attachment link must always be freely movable.

It must not rest on or be supported by other structural parts.

When attaching the components, make sure the position of the lifting point always enables forces to be exerted in longitudinal direction of the suspension link.

Make sure only the top parts of the lifting points turn into loading direction and not the firmly secured stationary portions.


Using 4-leg chainsling assemblies may cause higher risk because only two opposite legs may carry the load. Check the Working Load Limit of lifting points and chain sling assembly carefully and chose if necessary bigger sizes.

TWN 1830:



The lifting point must not be used for a permanent or prolonged turning of the load.

Take care for the usage of the preferred alignment shown below: #

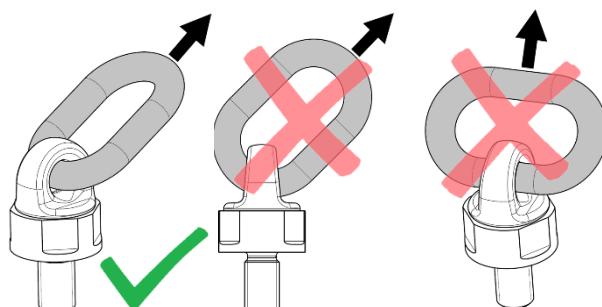


If used, a load reduction must be observed. #

Please note that the values for the Working Load Limits as a function of number of legs and inclination angle given in Table 4 base on the preferred alignment. #

TWN 1884:




The lifting point must not be used for a permanent or prolonged turning of the load.

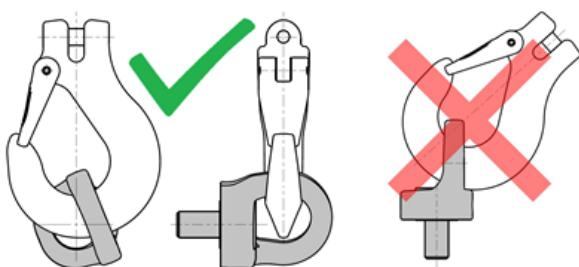

Components connected to the eyelet must always be able to move freely. #

TWN 1890:

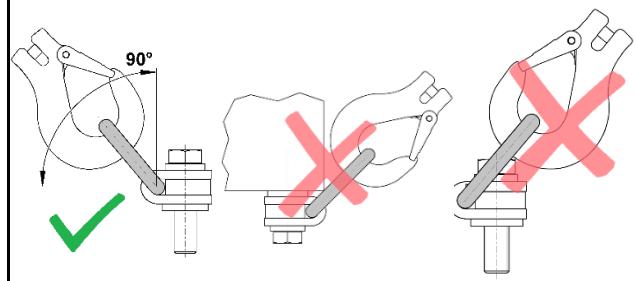

7.3 Influence of Temperature



The permissible Working Load Limit of the lifting points reduces at elevated temperatures.

The reduced Working Load Limit figures shown in the following tables shall only apply for short-term use at the temperatures indicated.

If the lifting points have been exposed to temperatures exceeding the maximum values specified they must no longer be used.

Type	Temperature range	Remaining WLL
TWN 0121/1	-20 °C ≤ t ≤ 100 °C -4 °F ≤ t ≤ 212 °F	100 %
TWN 0122	100 °C < t ≤ 205 °C 212 °F < t ≤ 400 °F	85 %
TWN 0127	205 °C < t ≤ 250 °C 400 °F < t ≤ 482 °F	80 %
TWN 1120	250 °C < t ≤ 300 °C 482 °F < t ≤ 572 °F	75 %
TWN 1884		
TWN 1890		
TWN 0123	-30 °C ≤ t ≤ 205 °C -22 °F ≤ t ≤ 400 °F	100 %
TWN 1830	200 °C < t ≤ 300 °C 400 °F < t ≤ 572 °F	90 %



If lifting points have been exposed to temperatures exceeding the maximum values specified they must not be used furthermore.

TWN 1830 and TWN 1884:

Take care for a loss of lubricant depending on several fitting positions and higher temperatures. A higher wear may occur. Shorten the inspection interval for that case.

7.4 Environmental Influence



Lifting points must not be used in environments where acids, aggressive or corrosive chemicals or their fumes are present.

Hot-dip galvanizing or a galvanic treatment is also prohibited.

7.5 Especially Hazardous Conditions



The degree of danger when used in offshore applications, the lifting of hazardous loads, such as for example liquid metal or similar, risk potentials have to be assessed by a competent person in the form of a risk analysis. Any additional rules and directives must be followed in this case.

8. INSPECTION, MAINTENANCE, DISPOSAL

8.1 General



Inspections and maintenance must be arranged by the Owner!

Inspection deadlines shall be determined by the Owner!

Visual inspections must be carried out and documented by competent and trained persons regularly but at least once a year, or more frequently if the lifting points are in heavy-duty service. After three years at the latest, they must additionally be

examined for cracks. A load test is not a substitute for this examination.

The results of the inspection shall be kept in a file that has to be set up for each lifting point before first use. The register will show characteristic data as well as identity details.




Immediately stop using lifting points that show the following defects:

- missing or illegible identification/marking,
- deformation, elongation or fractures,
- cuts, notches, cracks, incipient cracks, pinching,
- no freely rotating or turning possible,
- heating beyond permissible limits,
- severe corrosion,
- wear exceeding 10%, for example in the ring diameter,
- defect screws.

TWN 1830:

Take out of service if gap size „s“ exceeds values in table below.

Max. gap size „s“ for TWN 1830	
Thread size	s [mm]
M10 – M20	1.5
M24	2.0
M30	2.5
M36	3.0
M42 – M64	3.5
M72 – M100	4.0

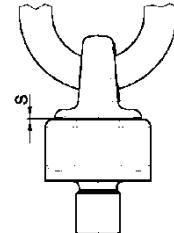

8.2 Inspection Service

THIELE offers inspection, maintenance and repair services for lifting points performed by trained and competent personnel.

8.3 Maintenance



Maintenance and repair work must only be performed by competent and trained persons.

Minor notches and cracks at suspension links may be eliminated by careful grinding observing the maximum cross section reduction requirement of 10 % and avoid making more severe cuts or scores.

All maintenance and repair activities are to be documented.

8.4 Disposal

All components and accessories of steel taken out of service must be scrapped in accordance with local regulations and provisions.

9. SPARE PARTS



Use only original spare parts.

Exclusively use original THIELE screws and bolts because these are made to meet special requirements e.g. concerning the impact toughness.

Type	WLL [lbs]	Article No.	Screw data
TWN 0127	6 900	Z07742	M20 x 50 ISO 4017 10.9
	11 700	Z09017	M24 x 50 ISO 4017 10.9
TWN 1884	1 100	Z11727	DIN 7991 M8 x 30 10.9 [#]
	1 600	Z11728	DIN 7991 M8 x 30 10.9 [#]
	2 200	Z11363	DIN 7991 M12 x 35 12.9 [#]
	3 700	Z10869	DIN 7991 M16 x 50 10.9
	5 700	Z11200	DIN 7991 M20 x 60 10.9
	7 700	Z11199	DIN 7991 M24 x 70 10.9
	1 400	Z10836	M10 x 45 ISO 4017 12.9
TWN 1890	2 200	Z10795	M12 x 50 ISO 4017 12.9
	3 700	Z09544	M16 x 70 ISO 4017 10.9
	5 500	Z08692	M20 x 80 ISO 4017 10.9
	8 800	Z09809	M24 x 90 ISO 4017 12.9
	13 200	Z07810	M30 x 100 ISO 4017 12.9
	17 600	Z07828	M36 x 120 ISO 4017 12.9
	22 000	Z10136	M42 x 140 ISO 4017 10.9

10. USE OF THIRD-PARTY SCREWS



If local circumstances dictate that screws have to be used different from those supplied with the installation or listed in Table 1 and Table 2, the operator must ensure that

- these fasteners conform to the specified diameter and strength class,
- they can achieve the minimum required screw-in depth,
- they are 100 % crack tested,
- each bolt has a proven notch impact energy of min. 36 J as a mean value of three samples tested at -4 °F or at the lowest fitting temperature if this is below -4 °F, and that none of the samples fall below 25 J,
- written confirmation of the crack test and impact energy results is enclosed with the technical documentation.

11. STORAGE

Lifting points must to be properly stored in dry conditions at temperatures between 32 °F and 104 °F.

Do not store in a manner that cause mechanical damage.

12. THIELE OPERATING AND MOUNTING INSTRUCTIONS



Current mounting and operating instructions are available as a PDF download on the homepage.



13. PUBLISHING INFORMATION

KWS Inc.

P.O. Box 470487, Tulsa, OK 74147, USA

Phone number 800-872-9313

Fax 918-665-4118

Email sales@kwschain.com

Manufacturer:

THIELE GmbH & Co. KG

Werkstraße 3, 58640 Iserlohn, Germany

Phone number +49 2371/947-0

Email info@thiele.de